

# Centro Counter

Assembly Instructions




1



Affix first curved profile flush with bottom of both 8-way posts ensuring the cut out in both triangular stealth plates face inwards (as shown).



2

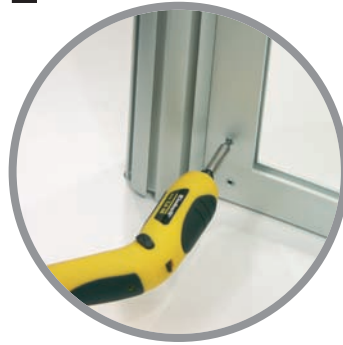

Assemble vertical profiles to the curved profile ensuring that the graphic fixing strip is adjacent to the post and facing forward (convex side).



Front  
(Convex)

3



Attach second curved profile to both posts and both verticals ensuring the top of the profile is flush with the top of the triangular stealth plates. Tighten clamp screws to secure in place.




4



Remove counter top from slip bag and spread bag on floor. Position counter top on bag with screw fixing holes facing upwards.

5

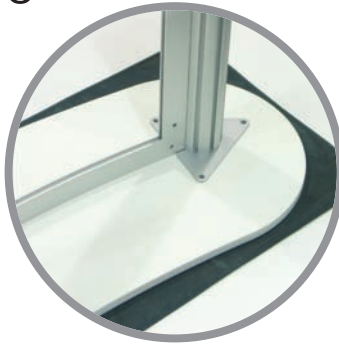

Turn assembled post and profile assembly over and align stealth plates with fixing holes on Counter top.



6



Insert all six fixing screws supplied and tighten to secure Counter top.



7



Align base plate to 8-way post in position shown. Insert 4 off fixing screws and fasten. Repeat for second base plate.



8



Turn completed assembly back onto its base plates and attach your graphic to convex side of system, working from one post to the other.

