



CURVE MOUNTING & FINISHING

instructions

Curve
Flexi-link
Flat End Cap



Introduction

Media

The Curve banner stand is designed to work best with 300-350 lightstop material, with a 125-150mic laminate. Using this media will enable all elements of Curve to meet its high standards and allow the user to fully appreciate the ease and beauty of the system; using any media other than the recommended weight may result in your product not working as required.

Useful Materials

In addition to your standard finishing apparatus we strongly recommend the following materials to be stock items when working with Curve:

- 300-350 lightstop material
- 125-150mic laminate
- 12.5mm magnetic tape (polarity A)
- Webbed tape
- Tessa tape



Finishing Curve Graphic Panels


Instructions

There is no hidden area on Curve graphic panels; for example if you have a 850x2050mm Twist stand, your graphic panel will be trimmed to 850x2050mm.

1. Trim your graphic to the correct size.
2. Mount finishing bars; when mounting the finishing bars, the adhesive attaches to the rear of the graphic panel, allowing all the printed area to be seen from the front. The header or footer should be positioned as

illustrated below, with the graphic butted up to the curved extrusion area of the finishing bar. [The top finishing bar has the tensioning rod].



3. It is recommended that magnetic tape (polarity A) should be applied to all graphic panels along the vertical sides; be sure to put the magnetic tape at the very edge of the graphic panel with no overlap.
4. Before rolling your graphic allow curing time for the adhesive.

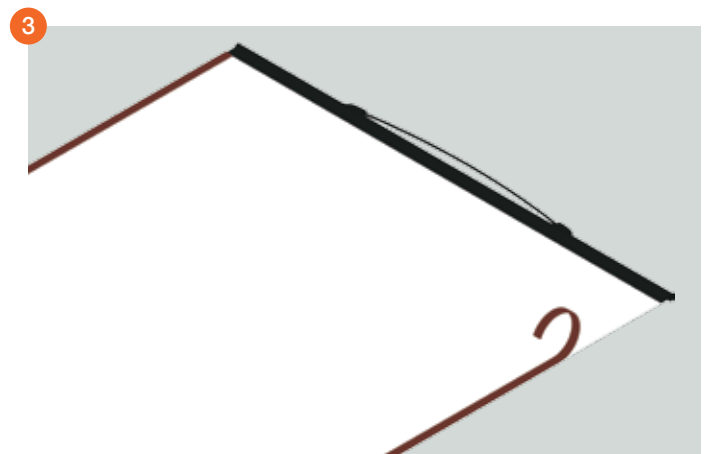

Finishing Flexi Link Graphic Panels

Instructions

1. Trim your graphic to 425mm by 2050mm
2. Mount finishing bars; when mounting the finishing bars, the adhesive attaches to the rear of the graphic panel, allowing all the printed area to be seen from the front. The header or footer should be positioned as illustrated below, with the graphic butted up to the curved extrusion area of the finishing bar.
3. Apply magnetic tape (polarity A) to both vertical sides, ensuring it is to the very edge of the graphic panel with no overlap.
4. Before rolling your graphic allow curing time for the adhesive.

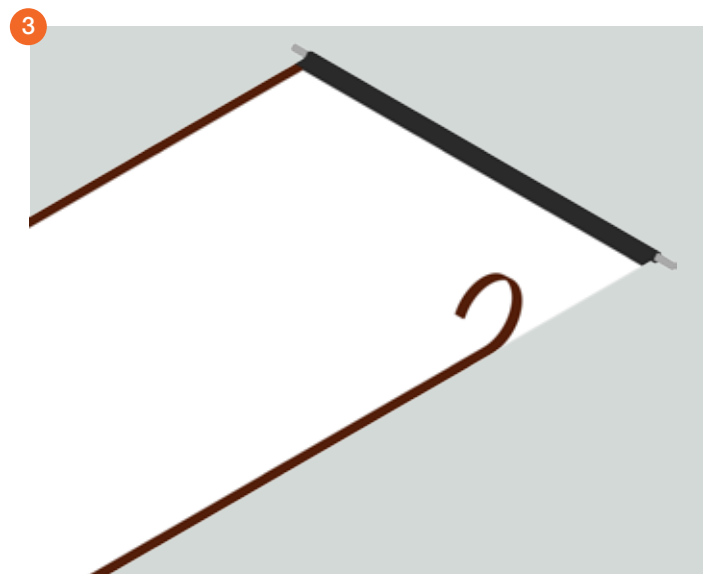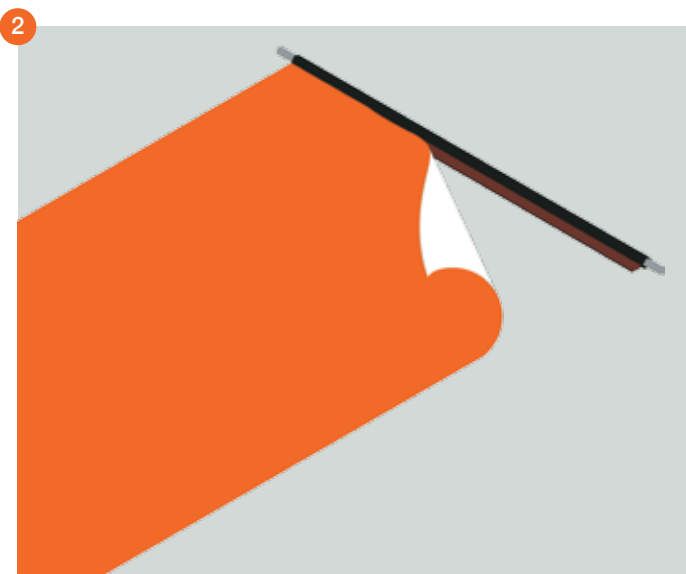

Finishing Flat End Cap Graphic Panels

Instructions

1. Trim your graphic to the specified overall size.
2. Cut along the inner tick marks as indicated on the template; this will result in a tapered cut. Re-attach together with no overlap using webbed tape on the rear.
3. Apply magnetic tape (polarity A) to both vertical sides, ensuring it is to the very edge of the graphic panel with no overlap.

